


HiFi ENGINE®

For more Hi-Fi manuals and set-up information
please visit www.hifiengine.com

KENWOOD

KA-31/51/71 KA-31B/51B

STEREO INTEGRATED AMPLIFIER

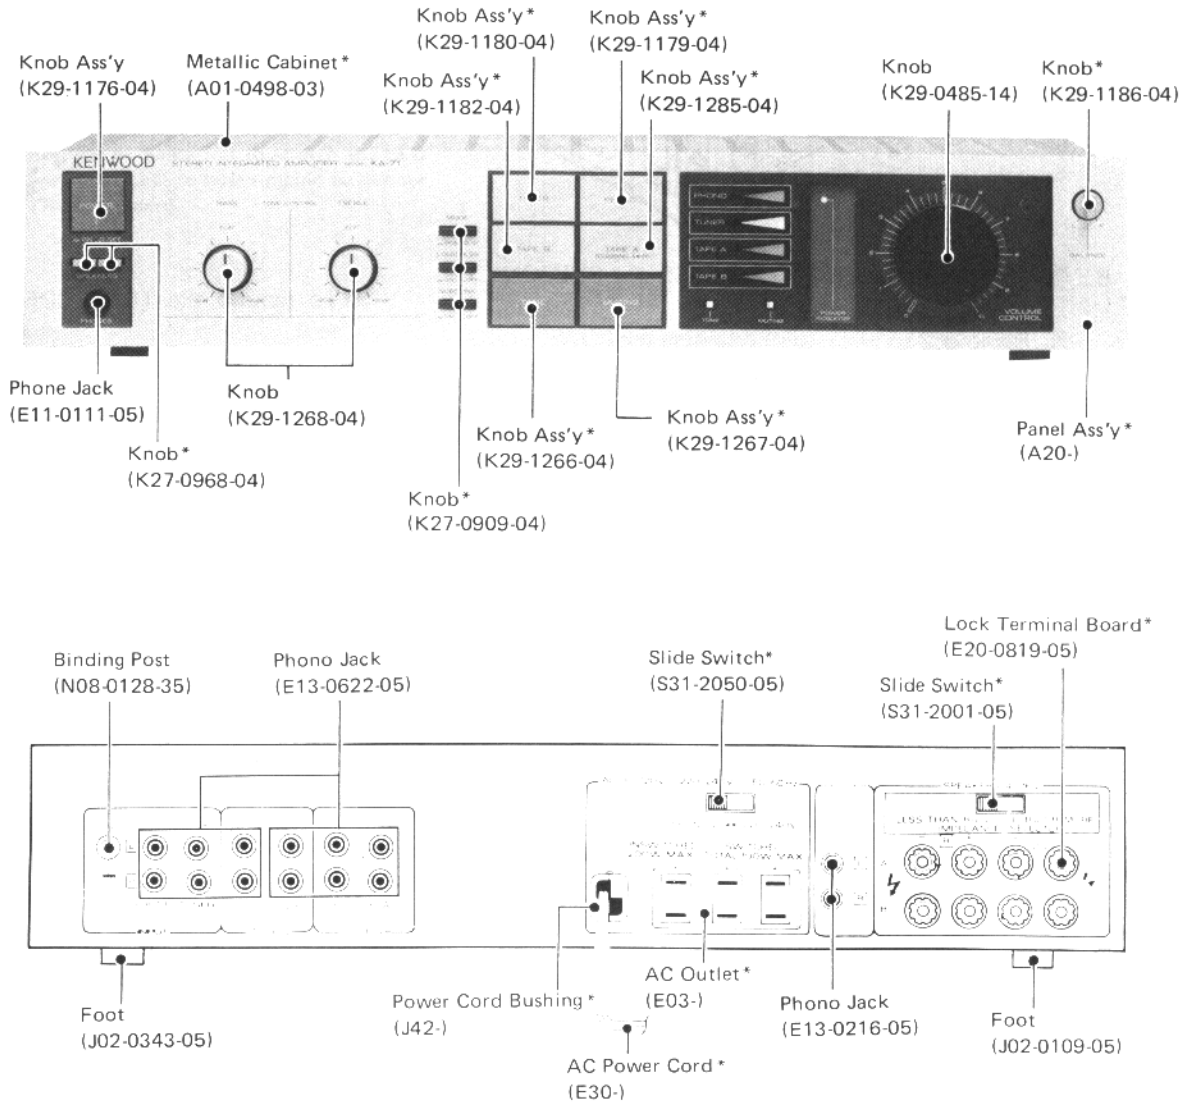

NOTE:


To avoid electrical shock and/or unit damage don't touch the heat sink as heat sink has power supply voltage.

* Refer to Part List on Page 9.
Photo is KA-71.

DISASSEMBLY FOR REPAIR


DISASSEMBLY FOR REPAIR

- A. 1. Pull volume knob and tone control knobs frontward (①).
 2. Remove 2 flat head screws (②) at the top side and 3 flat head screws (③) at the bottom side of the front panel and pull the front panel frontward (④).

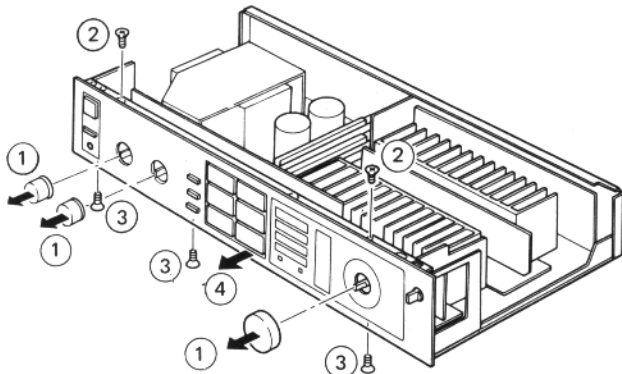



- B. 3. Pull 3 knobs (MODE, LOUDNESS and SUBSONIC) out (⑤).
 4. Remove 2 screws (⑥) retaining the POWER LED escutcheon and remove the POWER LED escutcheon.

Note: Only these 2 screws (⑥) are longer than the other Br-tap screws.

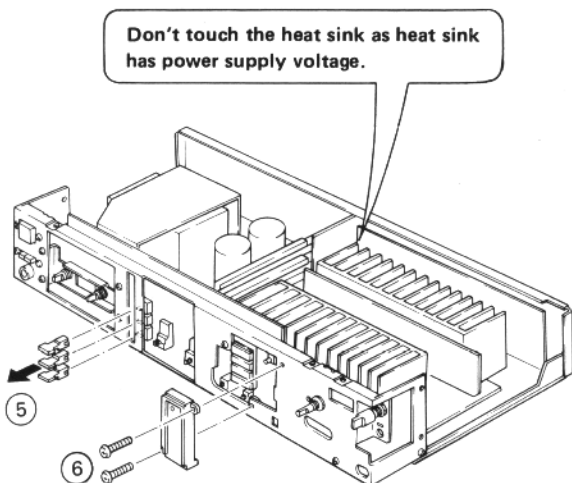


- C. 5. Remove 5 screws (⑦) from the sub panel to make the sub panel free from the chassis.
 6. Tilt the sub panel frontward in the direction of the arrow (⑧) to let the EXTENTION shaft to be free.

Note: The thermo-compensation transistor Q9 and Q10 on POWER AMP pc board (X07-2020-A/4) is located on the top of the heat sink. When replacing, be careful so that the transistor leads do not touch to the transistor mounting hardware and be sure to cover the leads by vinyl cover (KA-31 and KA-51).

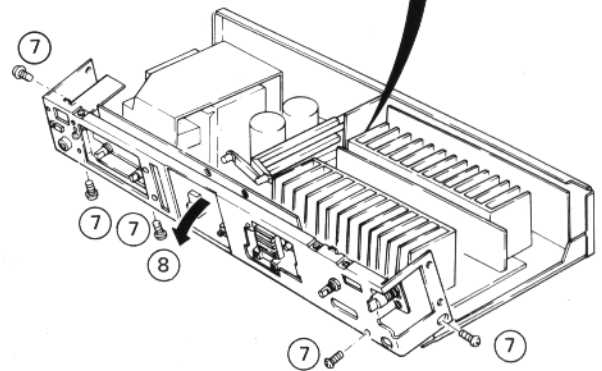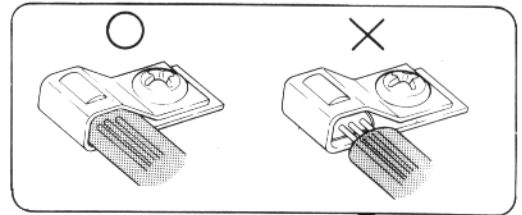


- To remove the TONE CONTROL pc board, skip to 9.
 D. 7. Remove 4 screws (⑨) retaining INPUT phono jack, 2 screws retaining INPUT SELECTOR pc board (X11-1870-B/6) and the screw (⑩) on the left side of the rear panel.
 8. Pull the rear panel gently (⑪) and pull the EQ AMP pc board (X11-1870-C/6) and INPUT SELECTOR pc board (X11-1870-B/6) up together in the direction of the arrow (⑫ & ⑬).

Note: When pulling out the EQ AMP pc board, be careful of GND lead.

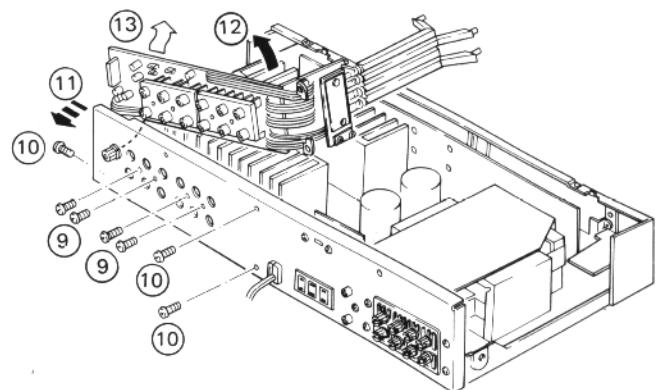

DISASSEMBLY FOR REPAIR / ADJUSTMENT / REGLAGES / ABGLEICH

- E. 9. Remove 2 screws (14) retaining the power switch mounting hardware and pull the POWER switch out in the direction of the arrow (15).
10. Remove 6 screws (16) retaining the TONE CONTROL pc board (X11-1870-A/6). One of the screw (16) is located behind of LED pc board (X11-1870-D/6), then remove it through the round cutting in LED pc board.
11. Pull the left side of the sub panel up a little and remove the left side of TONE CONTROL pc board (X11-1870-A/6) backward (17) until it is freed from the sub panel in the direction of the arrow (18).
12. Slide the TONE CONTROL pc board to the left to free from pc board mounting arm (19).

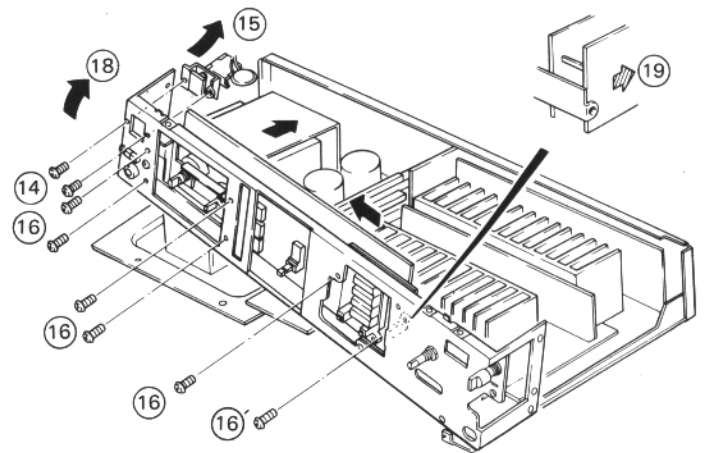

Note: When pulling the TONE CONTROL pc board, be careful of TEST terminal on the pc board not to scratch the LED pc board. To prevent this, LED pc board should be removed with TONE CONTROL pc board.

ADJUSTMENT

IDLE CURRENT ADJUSTMENT (BIAS CURRENT ADJUSTMENT)

1. Turn the volume knob fully counterclockwise.
2. Connect a DC voltmeter to both pins of R35 (R36) of the power amp pc board (X07-2010-B/4). (See the figure A).
3. Turn the power on and wait 5 minutes.
4. Adjust VR1 (VR2) so that the DC voltmeter reads 10 ~ 15 mV.

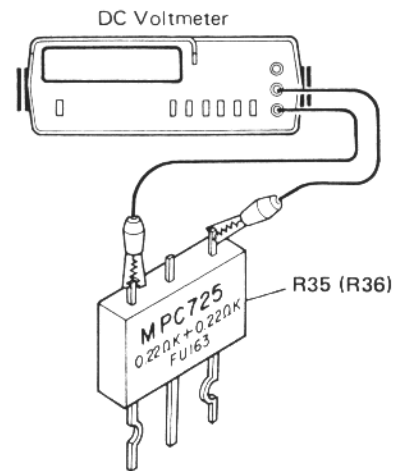


Fig. A

BLINDSTROMEINSTELLUNG (SIGNALLOSER ZUSTAND) (VORSPANNUNGSSTROM-EINSTELLUNG)


1. Den Lautstärkesteller ganz nach links drehen.
2. Einen Gleichspannungsmesser an beide Stifte von R35 (R36) des Audiogerätes (X07-2010-B/4) anschließen. (Siehe Zeichnung A)
3. Die Stromversorgung einschalten und 5 Minuten warten.
4. VR1 (VR2) so einstellen, daß der Gleichstrommesser 10 ~ 15 mV anzeigt.

REGLAGE DU COURANT LIBRE (SANS SIGNAL) (REGLAGE DU COURANT DE POLARISATION)

1. Tourner le réglage du volume à fond de course vers la gauche.
2. Relier un voltmètre pour courant continu aux deux broches du R35 (R36) de l'appareil audio (X07-2010-B/4). (Se reporter à l'illustration A)
3. Mettre le circuit sous tension et attendre cinq minutes.
4. Régler le VR1 (VR2) de façon que le voltmètre indique 10 à 15 mV.

PC BOARD (KA-71)

POWER AMP (X07-2010-11) Component side view

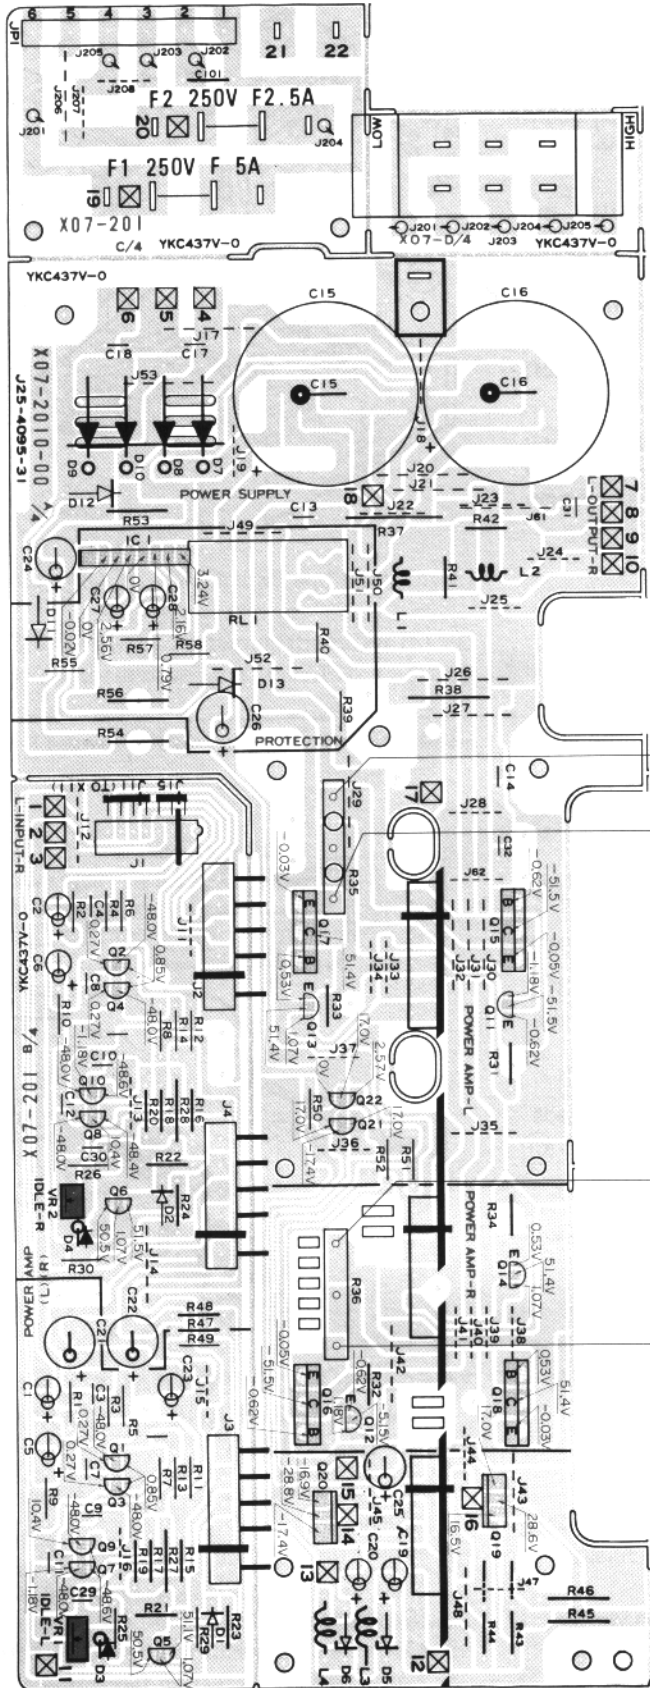

In this model, there are separated pc boards which was originally one. These separated pc boards can't be shipped independently.


ex.

Part No. of pc board	Separated portion no.
X09-1230-00	(A/3)
X09-1230-00	(B/3)
X09-1230-00	(C/3)

In the example shown above, separated portion can't be ordered independently. In case only A/3 was ordered, pc board ass'y of X09-1230-00, which all A/3, B/3, C/3 included, will be shipped.


For CONTROL PCB & SUB PCB see page 7.

Refer to the schematic diagram for the values of resistor and capacitors. The PC board drawing is vewing from the side easy to check.

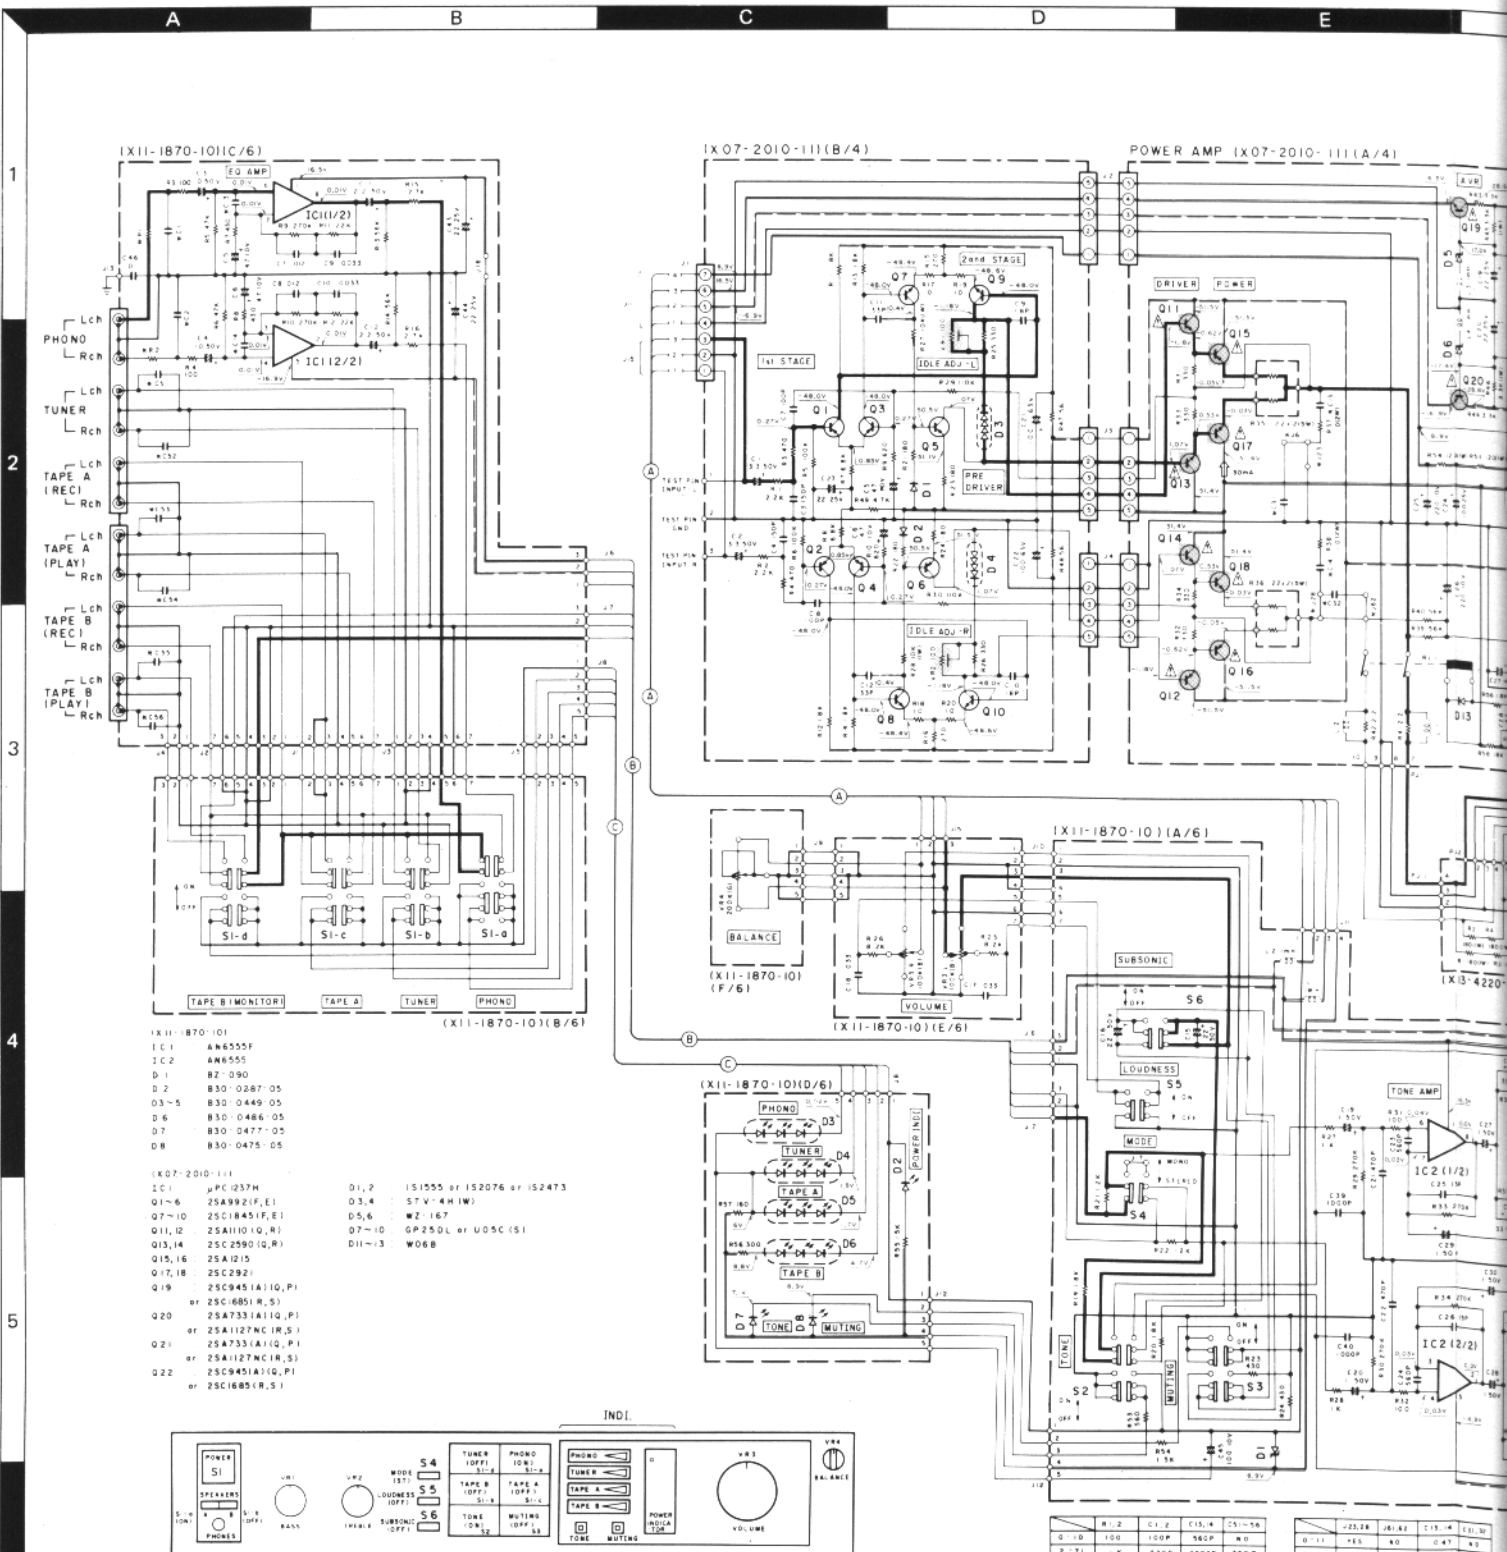


CAUTION: For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to parts list). Indicates safety critical components. To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.


- 2SA733(A)
- 2SA992
- 2SA1127NC
- 2SC945(A)
- 2SC1685
- 2SC1845




- 2SA1110
- 2SC2590



- AN6555F
- AN6555

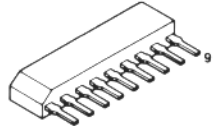


- 2SA1215
- 2SC2921



INTEGRATED AMPLIFIER

KA-71

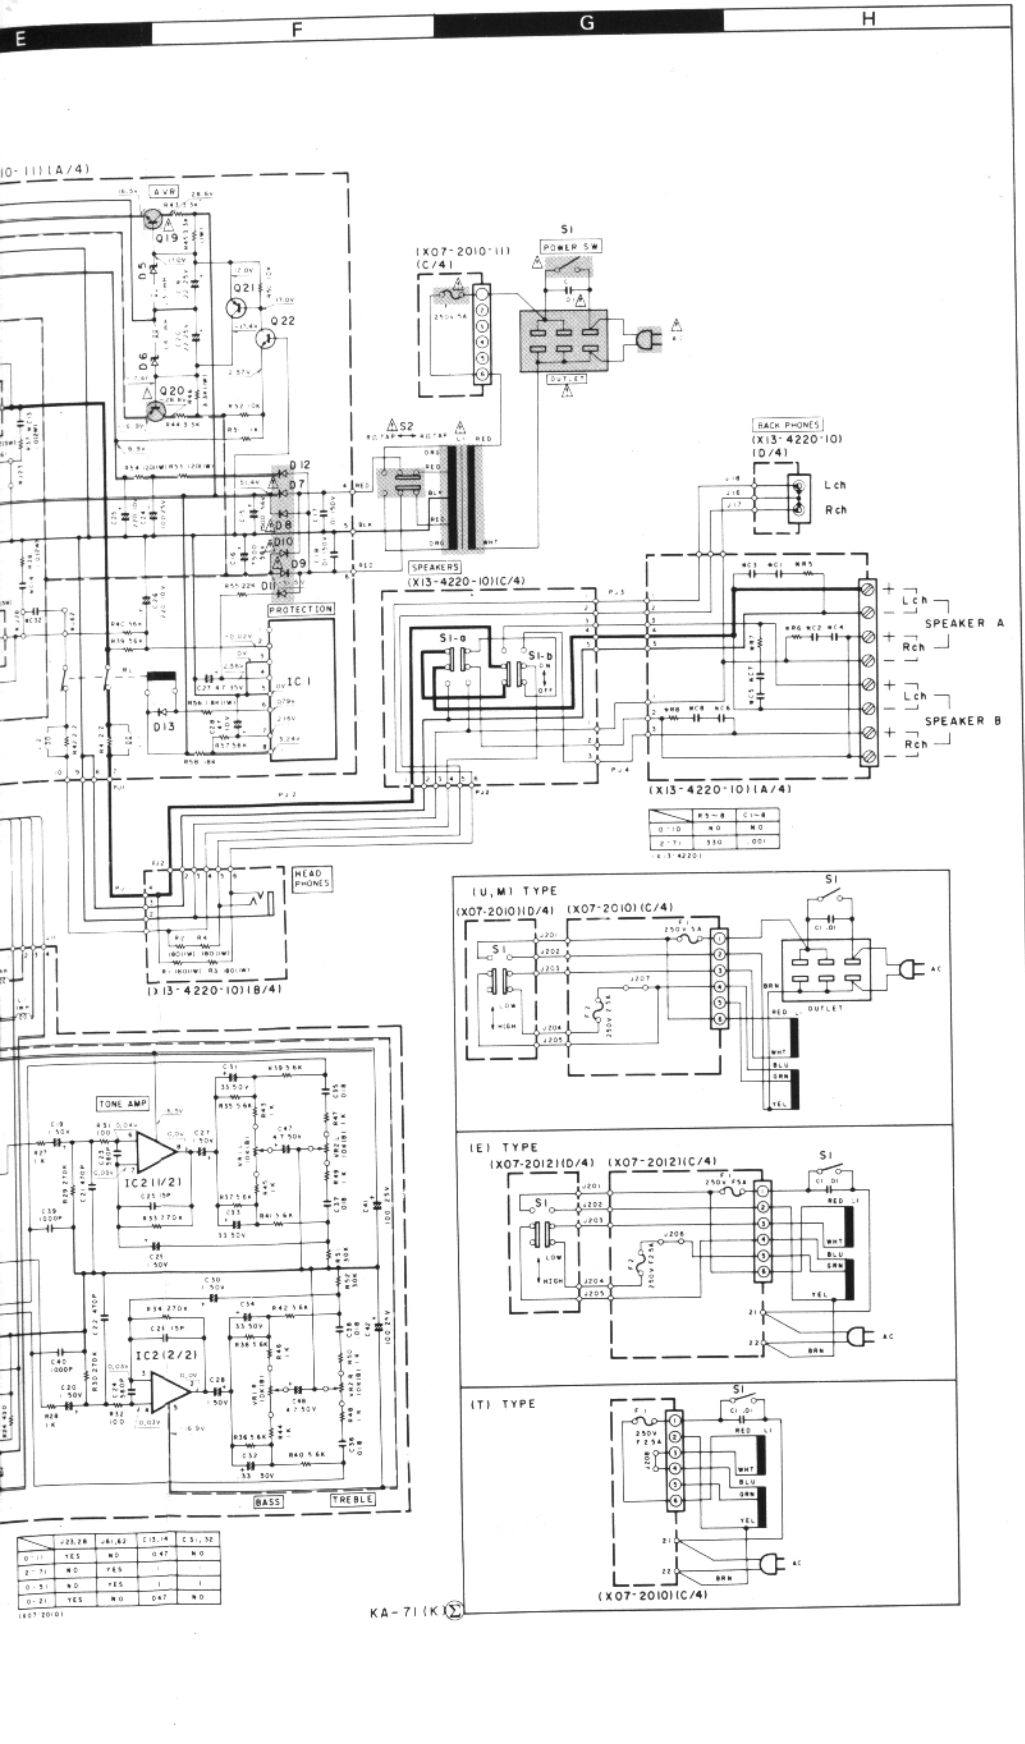

SPECIFICATION

Audio Section

Power Output
65 watts* per channel minimum RMS, both channels driven, at 8 ohms from 20 Hz to 20,000 Hz with no more than 0.05% total harmonic distortion.

Both Channels Driven at 8 ohms.

1 kHz 68 W + 68 W

Dynamic Power Output at

4 ohms 320 W

Total Harmonic Distortion

AUX input to SPEAKER output
(20 Hz to 20,000 Hz) 0.05% at rated power into 8 ohms
(20 Hz to 20,000 Hz) 0.03% at 1/2 rated power into 8 ohms

PHONO input to SPEAKER

output (1 kHz) 0.025% at rated power with

VOLUME - 20 dB

Intermodulation Distortion 0.05% at rated power

(60 Hz: 7 kHz = 4:1) into 8 ohms

Damping Factor 25 (1 kHz into 8 ohms)

Power Bandwidth 10 Hz to 100 kHz

at 0.2% T H D

Frequency Response 10 Hz to 100 kHz,

+ 0 dB, - 3 dB

Input Sensitivity/Impedance

Phono 2.5 mV/50 k ohms

Tuner, Tape 150 mV/25 k ohms

Signal-to-Noise Ratio (IHF, A)

Phono 74 dB for 2.5 mV input

80 dB for 5.0 mV input

Tuner, Tape 100 dB for 150 mV input

Phono Maximum Input Level 110 mV (RMS),

T H D 0.05% at 1,000 Hz

Output Level/Impedance

Tape REC (Pin) 150 mV/2 x ohms

Phono Frequency Response RIAA standard curve ± 0.5 dB

(20 Hz to 20,000 Hz)

Tone Control

Bass ± 10 dB at 100 Hz

Treble ± 10 dB at 10 kHz

Subsonic Filter 18 Hz, 6 dB/oct

Loudness Control + 10 dB at 100 Hz

(at - 30 dB VOLUME Level)

General

Power Requirements 60 Hz 120 V (U.S.A. & Canada

model), 50 Hz 240 V (U.K. model)

or 50/60 Hz 110 - 120 V

220 - 240 V, switchable

Power Consumption 2.5 A (UL and CSA)

270 W

18 ohms at rated power

20 W (No signal)

A.C. Outlet Switched 2, Unswitched 1

Dimensions W 440 mm (17.5"16")

H 87 mm (4.19"64")

D 236 mm (9.51"64")

Weight 6.7 kg (14.8 lb)

* Measured pursuant to Federal Trade Commission's Trade Regulation rule on Power Output Claims for Amplifier in U.S.A.

Kenwood follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.

Kenwood poursuit une politique de progrès constants en ce qui concerne le développement. Pour cette raison, les spécifications sont sujettes à modifications sans préavis.


Kenwood strebt ständige Verbesserungen in der Entwicklung an. Daher bleiben Änderungen der technischen Daten jederzeit vorbehalten.

DC voltages are as measured with a high impedance voltmeter with no signal input. Values may vary slightly due to variations between individual instruments or/and units.


Les tensions c.c. doivent être mesurées avec un voltmètre à haute impédance sans signal d'entrée. Les valeurs peuvent différer légèrement du fait des variations inhérentes aux appareils et aux instruments de mesure individuels.



Die angegebenen Gleichspannungswerte wurden mit einem hochohmigen Spannungsmesser ohne Eingangssignal gemessen. Dabei schwanden die Meßwerte aufgrund von Unterschieden zwischen einzelnen Instrumenten oder Geräten u.U., geringfügig.

215
921




μPC1237H



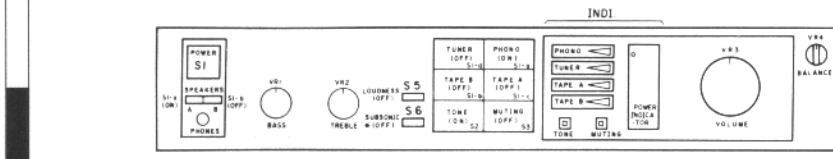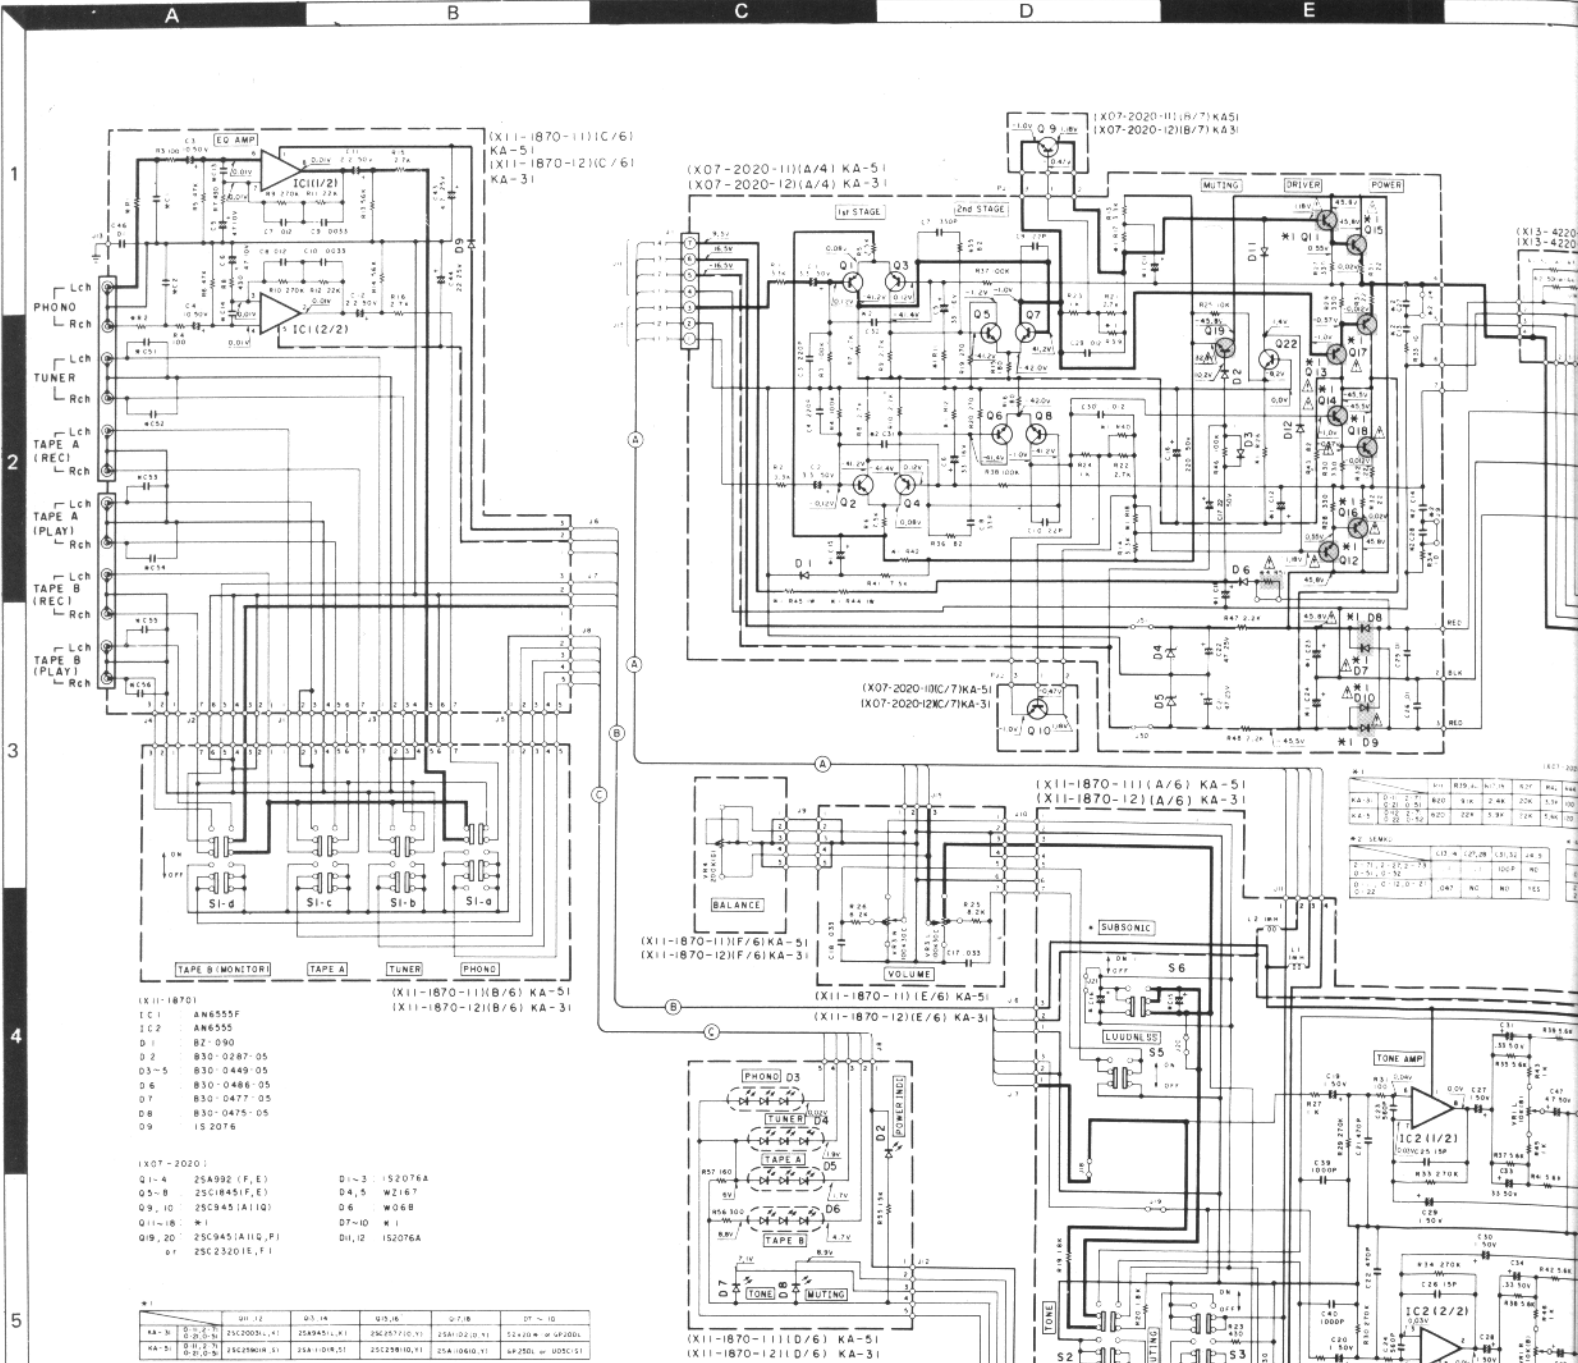

CAUTION: For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to parts list). Indicates safety critical components. To reduce the risk of electric shock, leakage current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.

2SA954	2SC2003	2SA110	2SA1102	AN6555F
2SA992	2SC2320	2SC2590	2SA1106	AN6555
2SA945(A)			2SC2577	
2SC1845			2SC2581	



SPECIFICATION

Audio Section (KA-51)

Power Output
50 watts* per channel minimum RMS, both channels driven, at 8 ohms from 20 Hz to 20,000 Hz with no more than 0.09% total harmonic distortion.

Both Channels Driven at 8 ohms,
 1 kHz 53 W + 53 W
Dynamic Power Output at
 4 ohms 250 W

Audio Section (KA-31)

Power Output
30 watts* per channel minimum RMS, both channels driven, at 8 ohms from 20 Hz to 20,000 Hz with no more than 0.09% total harmonic distortion.

Both Channels Driven at 8 ohms,
 1 kHz 32 W + 32 W
Dynamic Power Output at
 4 ohms 150 W

Total Harmonic Distortion

AUX input to SPEAKER output
 (20 Hz to 20,000 Hz) 0.09% at rated power into 8 ohms
 (20 Hz to 20,000 Hz) 0.05% at 1/2 rated power into 8 ohms

PHONO input to SPEAKER output
 (1 kHz) 0.04% at rated power with VOLUME = 20 dB

Intermodulation Distortion 0.05% at rated power (60 Hz: 7 kHz = 4:1) into 8 ohms

Damping Factor 25 (1 kHz into 8 ohms)

Power Bandwidth 10 Hz to 100 kHz at 0.2% T H D

Frequency Response 10 Hz to 100 kHz, +0 dB, -3 dB

Input Sensitivity/Impedance
 Phono 2.5 mV/50 k ohms
 Tuner, Tape 150 mV/25 k ohms

Signal-to-Noise Ratio (IHF, A)
 Phono 74 dB for 2.5 mV input
 80 dB for 5.0 mV input
 Tuner, Tape 100 dB for 150 mV input
 Phono Maximum Input Level 110 mV (RMS), T H D: 0.05% at 1,000 Hz

Output Level/Impedance
 Tape REC (Pin) 150 mV/2.7 k ohms
 Phono Frequency Response RIAA standard curve ± 0.5 dB
 120 Hz to 20,000 Hz

Tone Control
 Bass ± 10 dB at 100 Hz
 Treble ± 10 dB at 10 kHz
 Loudness Control -9 dB at 100 Hz (at -30 dB VOLUME Level)

General

Power Requirements 60 Hz 120 V (U.S.A. & Canada model), 50 Hz 240 V (U.K. model) or 50-60 Hz 110 - 120 V/220 - 240 V, switchable

Power Consumption 110 W (U.I. and CSA) 140 W 18 ohms at rated power 13 W (No signal)

A.C. Outlet Switched 2, Unswitched 1

Dimensions W 440 mm (17-5/16") H 87 mm (3-13/64") D 236 mm (9-5/164")

Weight 6.1 kg (13.5 lb) (KA-51) 4.7 kg (10.4 lb) (KA-31)

* Measured pursuant to Federal Trade Commission's Trade Regulation rule on Power Output Claims for Amplifier in U.S.A.

Kenwood follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.


Kenwood poursuit une politique de progrès constants en ce qui concerne le développement. Pour cette raison, les spécifications sont sujettes à modifications sans préavis.

Kenwood strebt ständige Verbesserungen in der Entwicklung an. Daher bleiben Änderungen der technischen Daten jederzeit vorbehalten.


DC voltages are as measured with a high impedance voltmeter with no signal input. Values may vary slightly due to variations between individual instruments or/and units.

Les tensions c.c. doivent être mesurées avec un voltmètre à haute impédance sans signal d'entrée. Les valeurs peuvent différer légèrement du fait des variations inhérentes aux appareils et aux instruments de mesure individuels.


Die angegebenen Gleichspannungswerte wurden mit einem hochimpedanten Spannungsmesser ohne Eingangssignal gemessen. Dabei schwanden die Meßwerte aufgrund von Unterschieden zwischen einzelnen Instrumenten oder Geräten u.U. geringfügig.

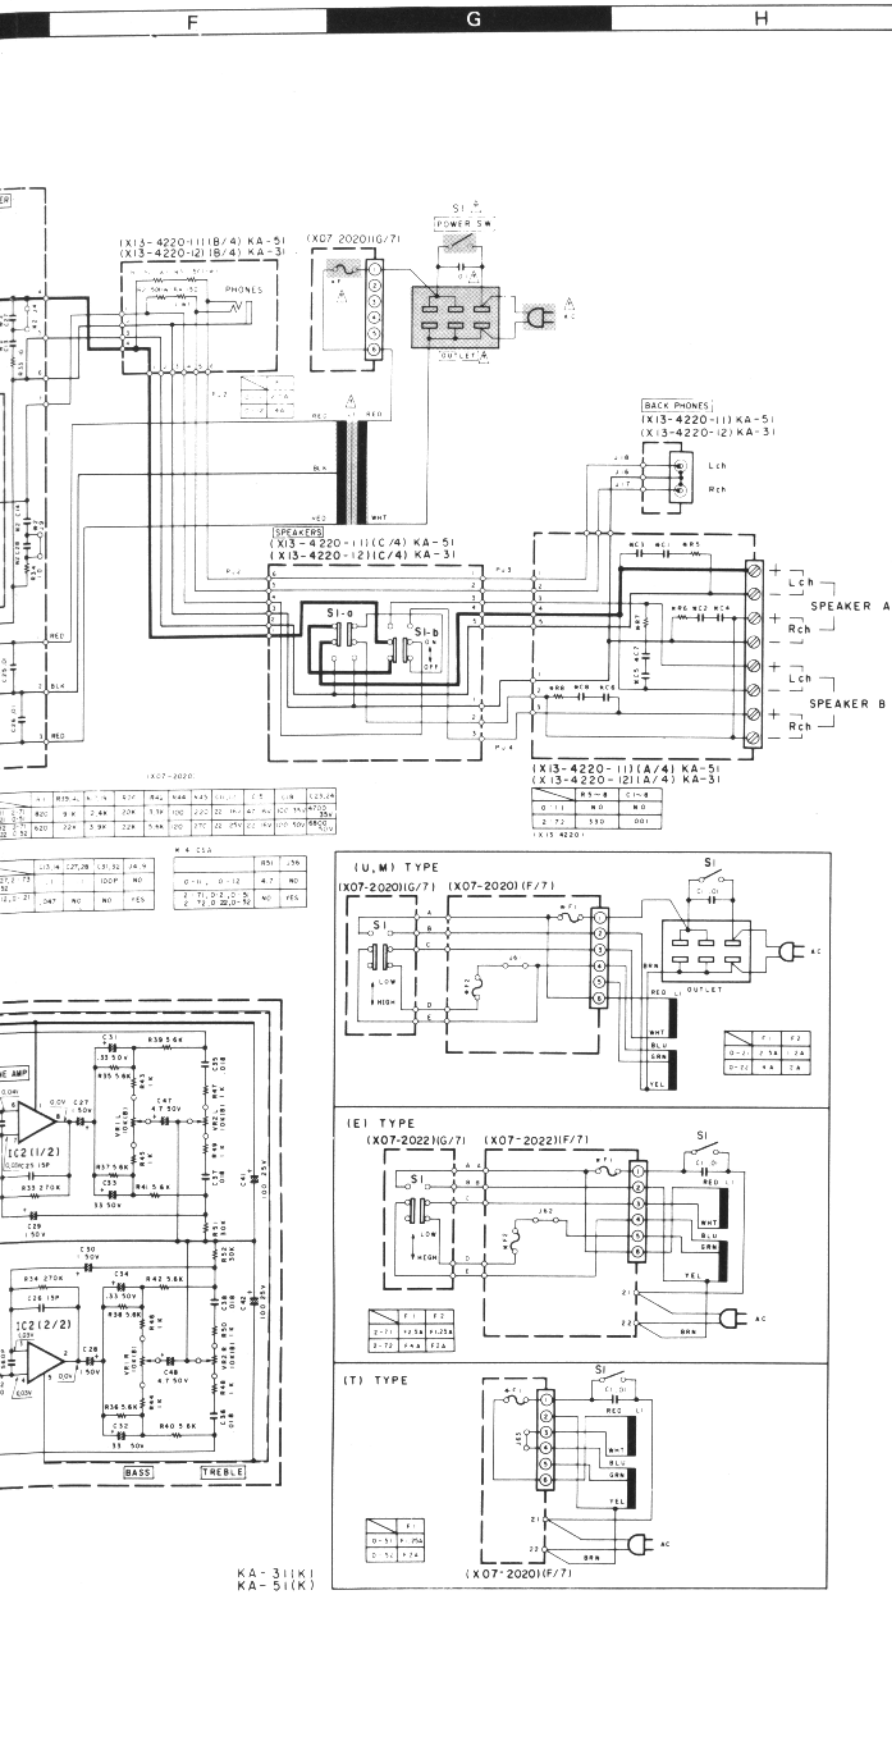

CONTROL PCB (X11-1870-10) Component side view


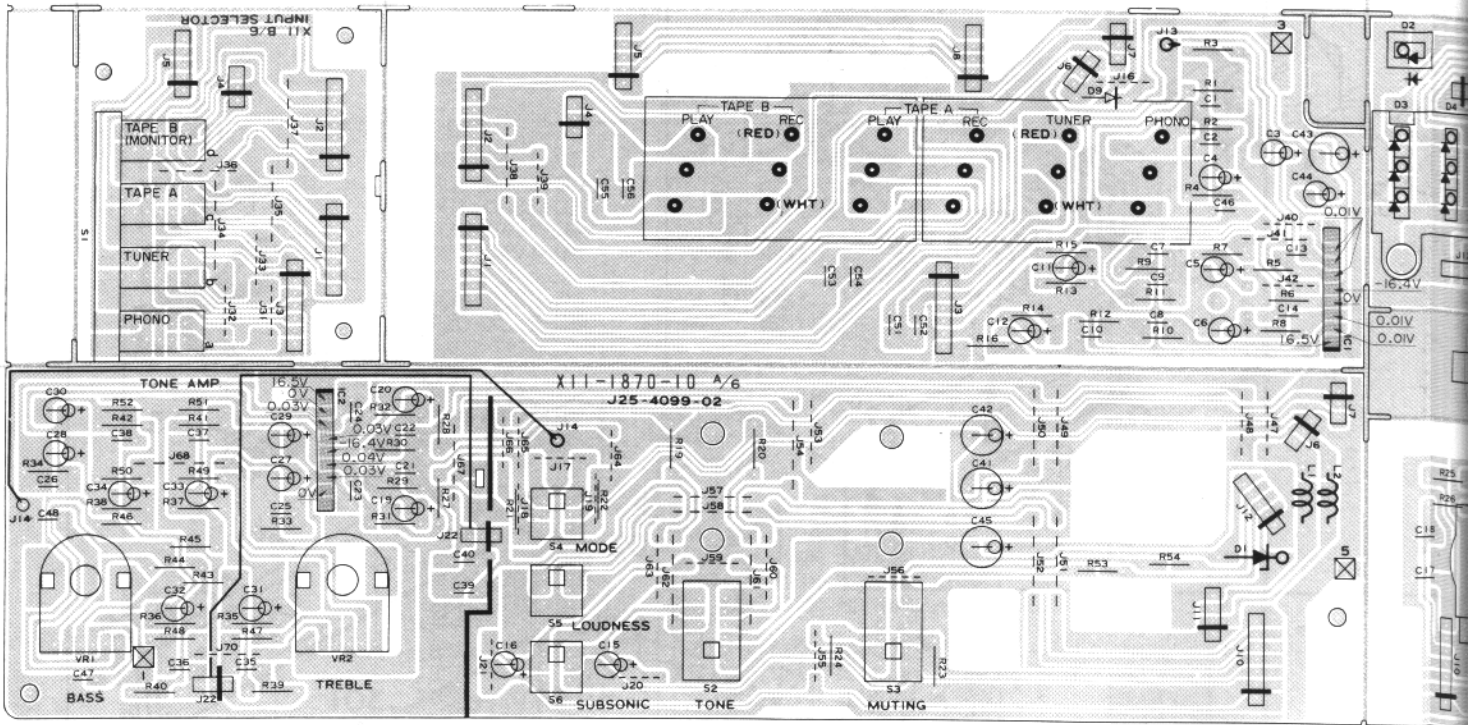


POWER AMP (X07-2020-11) (KA-51, KA-31) Component side view

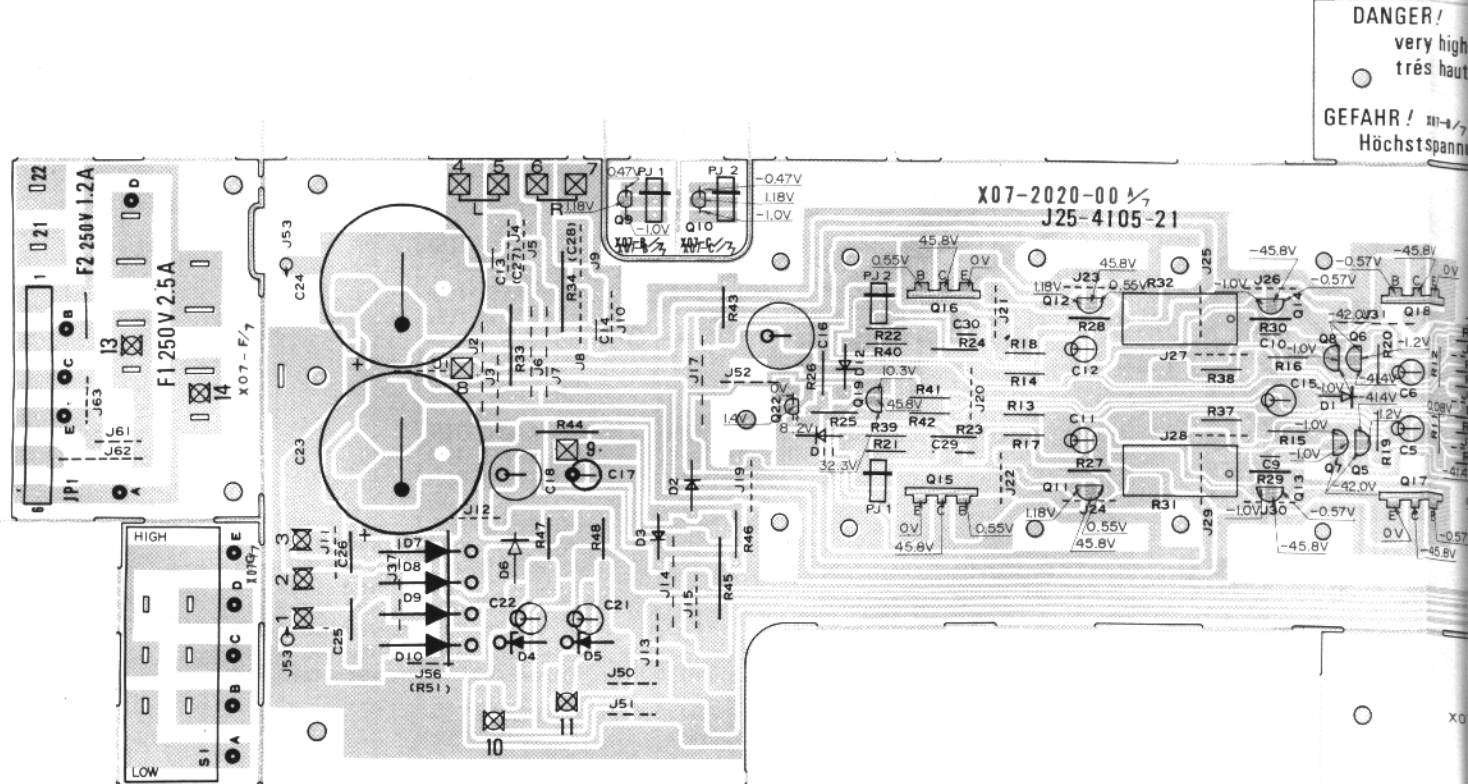


PC BOARD

SUB PCB (X13-4220-10) Component side view

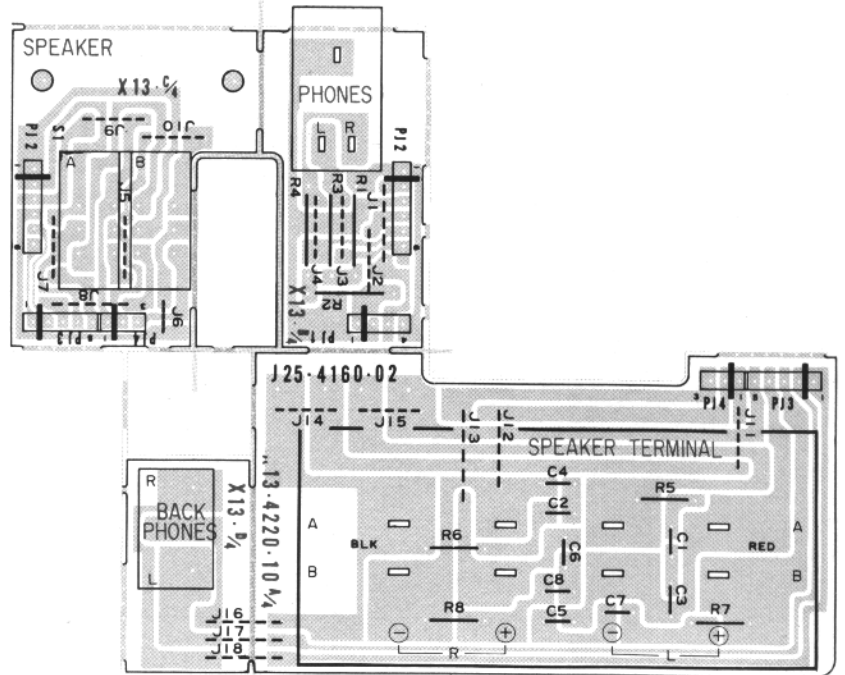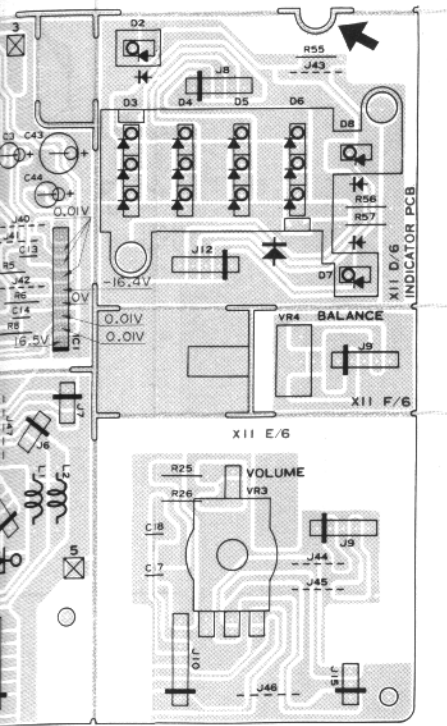

DANGER !
 very high voltage
 très haute tension

GEFAHR ! 107-0/7 **PERIGRO**
 Höchstspannung alto tension




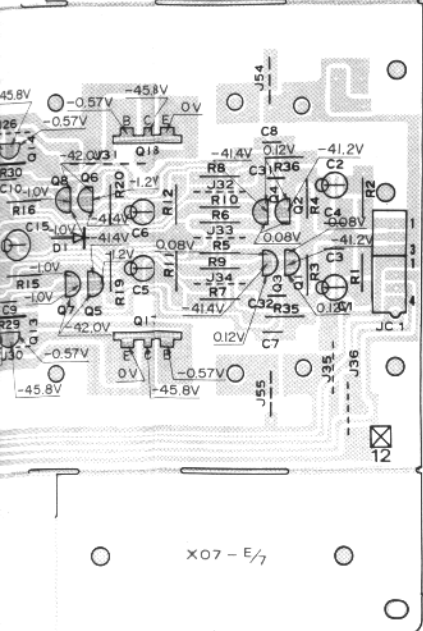


In this model, there are separated pc boards which was originally one. These separated pc boards can't be shipped independently.

ex.	Part No. of pc board	Separated portion no.
	X09-1230-00	(A/3)
	X09-1230-00	(B/3)
	X09-1230-00	(C/3)

In the example shown above, separated portion can't be ordered independently. In case only A/3 was ordered, pc board ass'y of X09-1230-00, which all A/3, B/3, C/3 included, will be shipped.


Refer to the schematic diagram for the values of resistor and capacitors. The PC board drawing is viewing from the side easy to check.

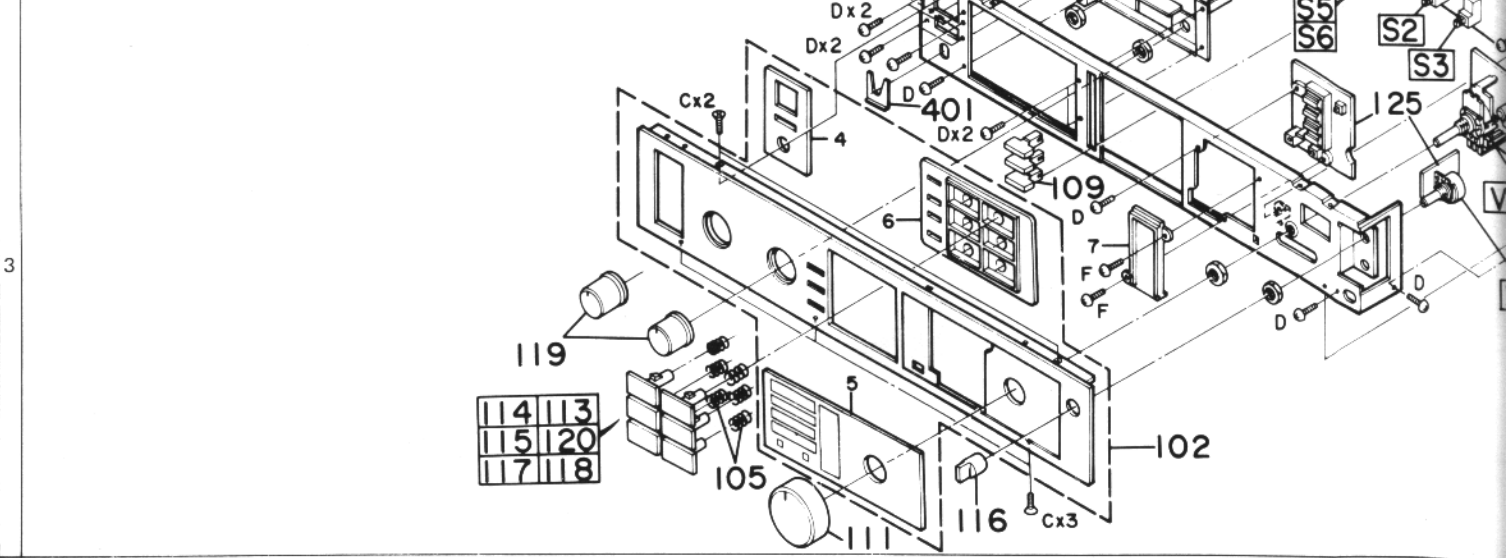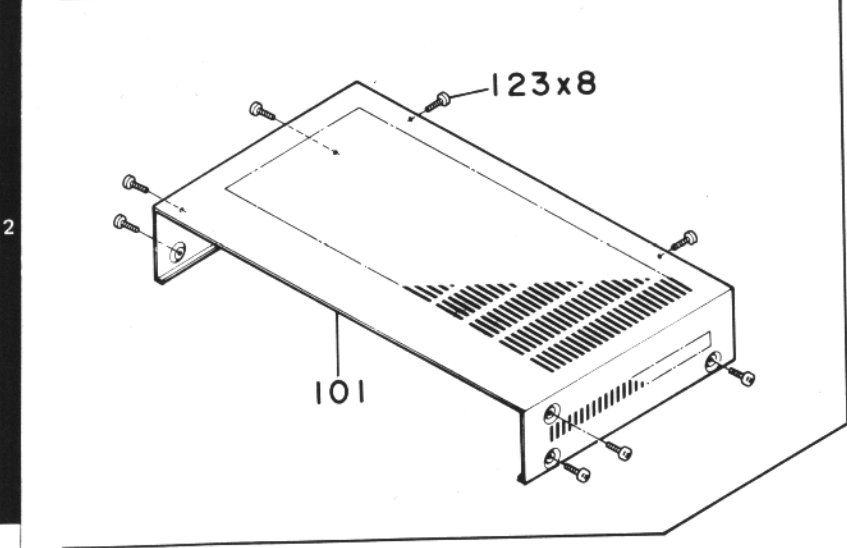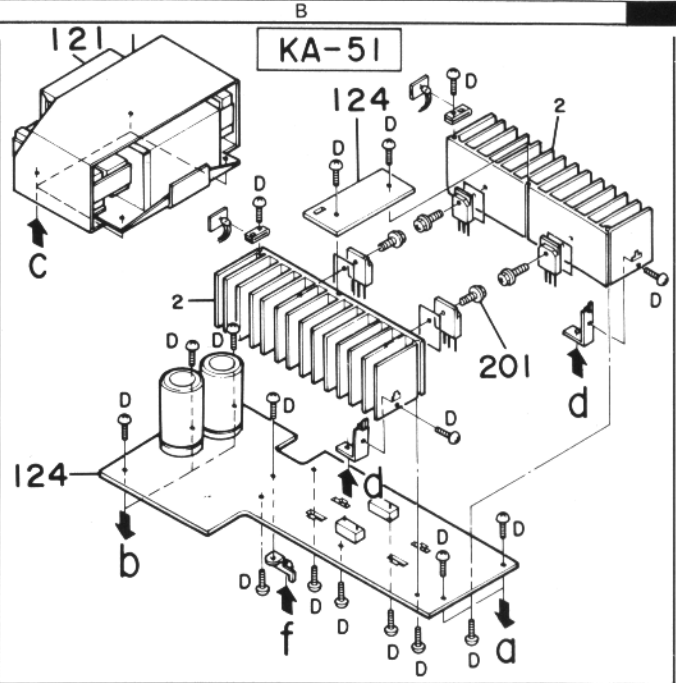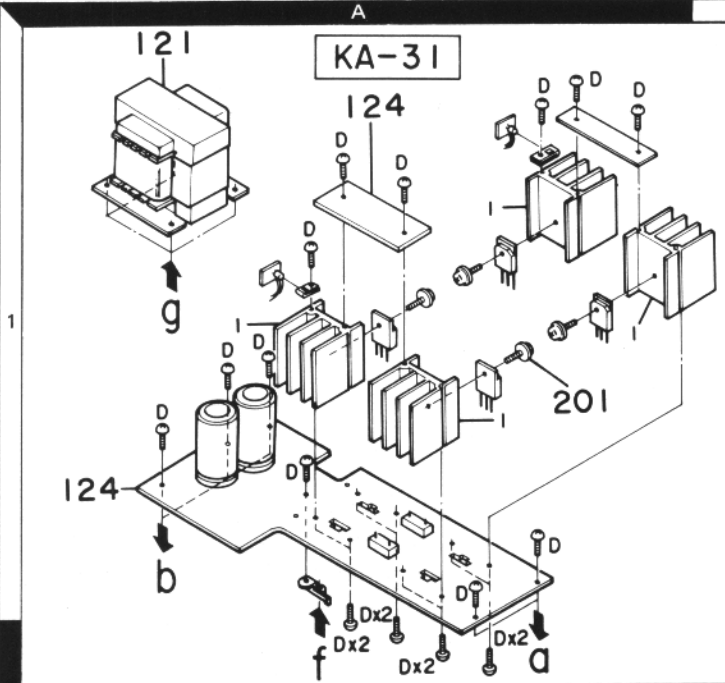

KA-31/51/71

EXPLODED VIEW

Exploded view No. 1 ~ 15 are not supplied.

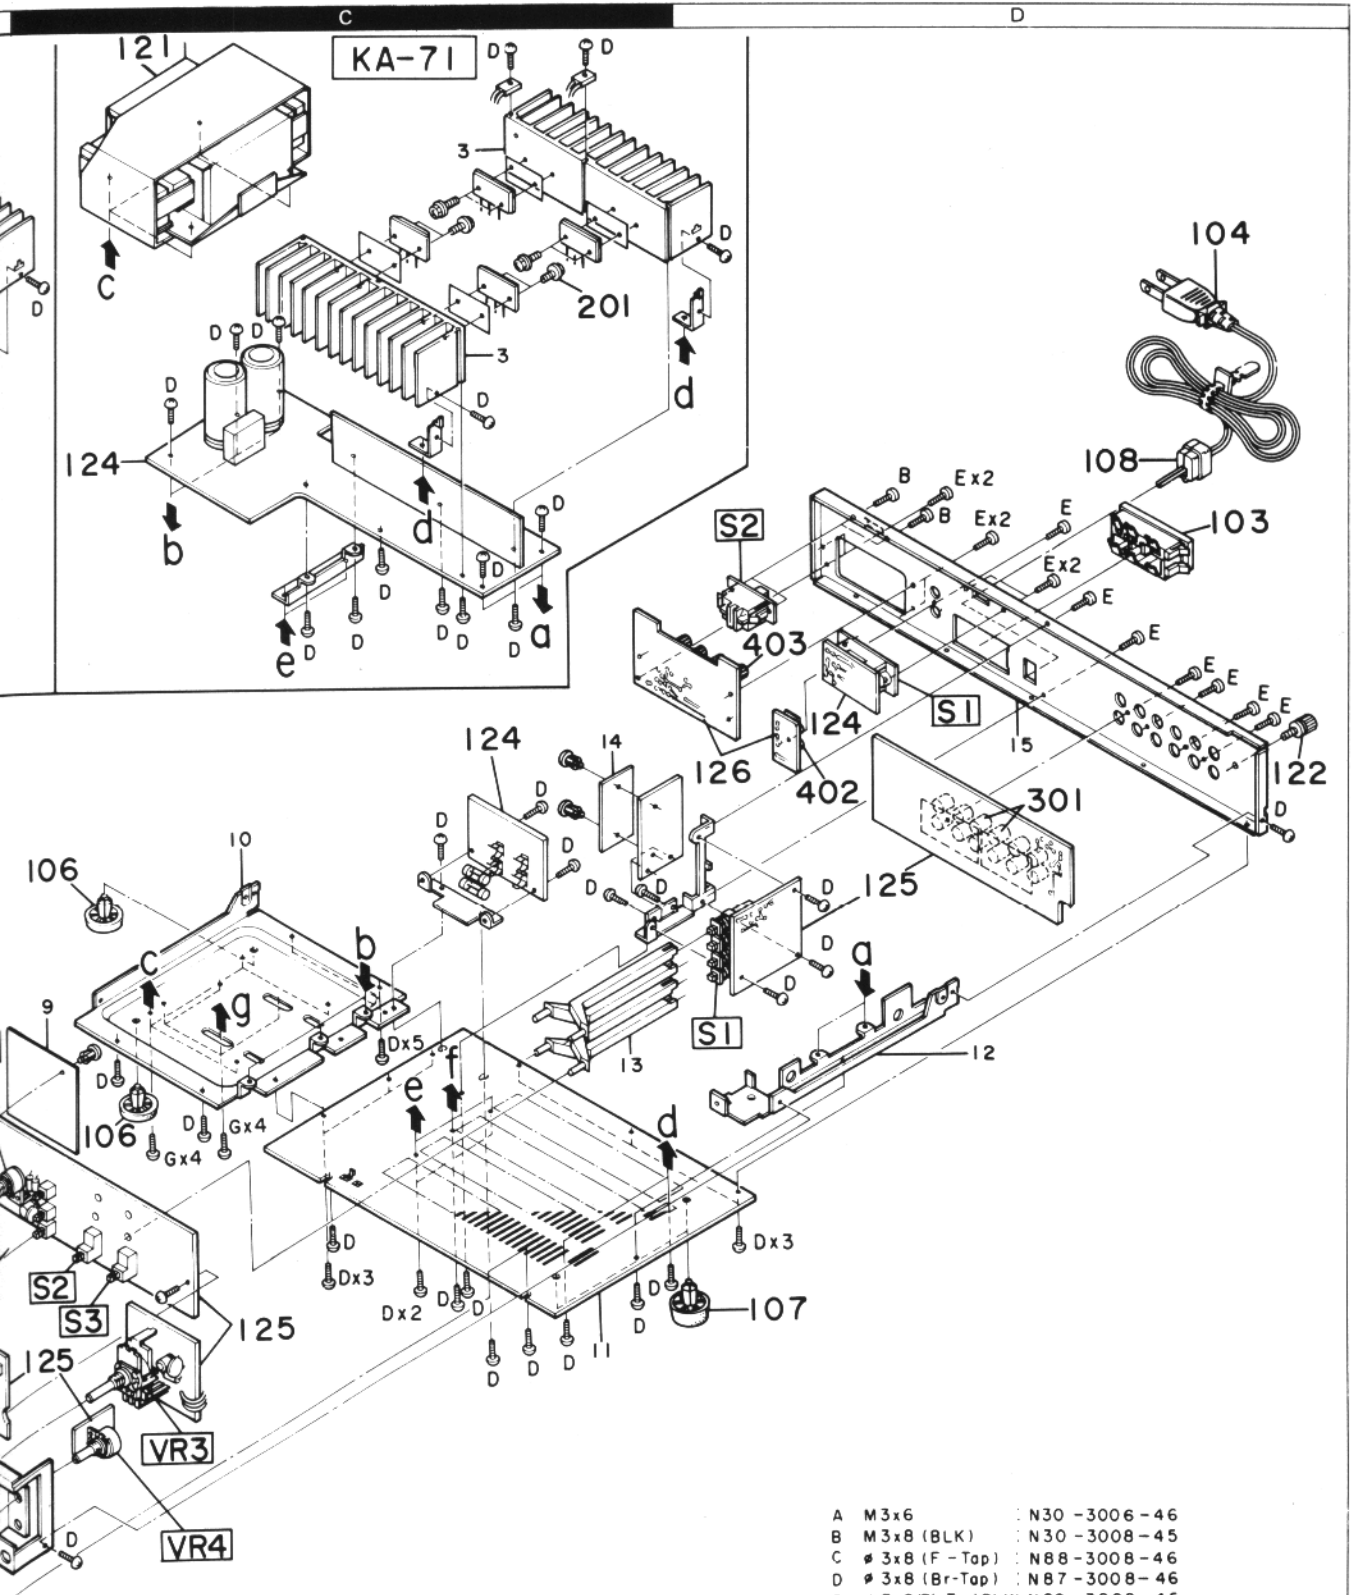

A	M 3x6	: N30 - 3006 - 46
B	M 3x8 (BLK)	: N30 - 3008 - 45
C	φ 3x8 (F - Top)	: N88 - 3008 - 46
D	φ 3x8 (Br - Top)	: N87 - 3008 - 46
E	φ 3x8 (Bl - Top) BLK	: N89 - 3008 - 45
F	φ 3x10 (Br - Tap)	: N87 - 3010 - 46
G	φ 4x10 (Br - Tap)	: N87 - 4010 - 46

KA - 71, 51, 31